

## CARE AND MAINTENANCE

Chroma Quartz by Pental is an extremely low maintenance surface that is not easily damaged. Following a few simple instructions will keep your countertop looking like new for many years to come.

- Use mild soap and warm water for routine daily cleaning. Be sure to rinse thoroughly.
- For stubborn spots, use a soft cloth or a non-scratch scrub pad, and a mild non-abrasive cleanser, with a neutral PH.
- For dried residue, a flat object such as a plastic putty knife can be used to gently scrape off the foreign material.
- Honed surfaces can show fingerprints and other signs of daily living more readily than polished surfaces, and will require more frequent maintenance. Honed surfaces can be cleaned as described above.
- Although Chroma Quartz by Pental is extremely scratch resistant, it is not scratch proof. You should never cut or chop directly on your countertop. Always use a cutting board.
- Always use a hot pad or trivet when setting down hot objects, such as hot pans or plates. Direct contact with extremely high heat can cause damage.
- Take care to avoid spilling harsh chemicals such as drain cleaners, paint strippers, oven cleaners, bleaches, etc on your Chroma Quartz by Pental countertop.